

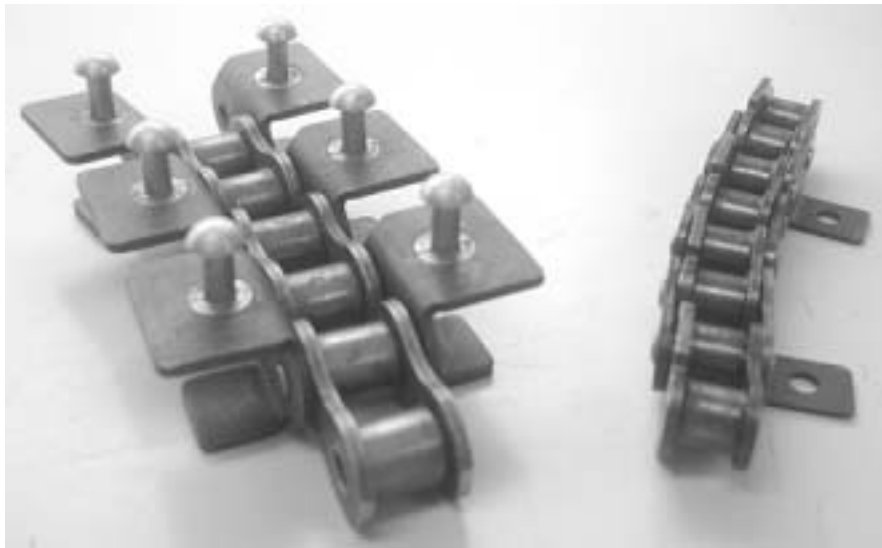


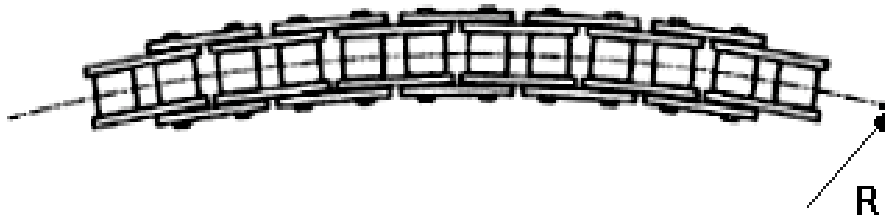

# CADENAS DE TRANSMISIÓN

## Serie ISO - ASA

### Flexión Lateral

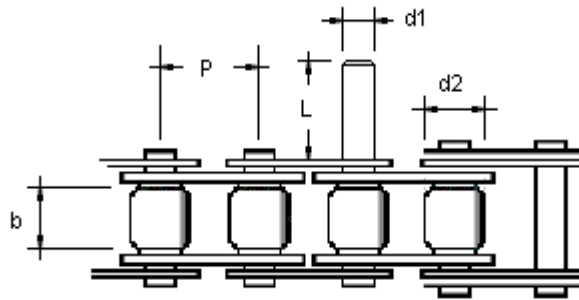

Referencia	PASO (mm.)	PASO (pulg.)	Ancho Interior	Ø Rod.	Longitud Eje	Ø Eje Prolong d1	Carga de Rotura	Radio de Giro
	P	P	b	d2	L		Kp.	R
08B-1	12,7	1/2	7,75	8,51	15	4,45	1500	500
10B-1	15,875	5/8	9,65	10,16	18	5,08	2100	500
12B-1	19,05	3/4	11,68	12,07	21	5,72	2750	800
16B-1	25,4	1 "	17,02	15,87	33	8,27	6100	1200
08A-1	12,7	1/2	7,95	7,95	15,5	3,98	1100	356
10A-1	15,875	5/8	9,53	10,16	19	5,08	2100	406
12A-1	19,05	3/4	12,70	11,91	24	5,94	2750	508
16A-1	25,4	1 "	15,88	15,88	31	7,92	6100	914